


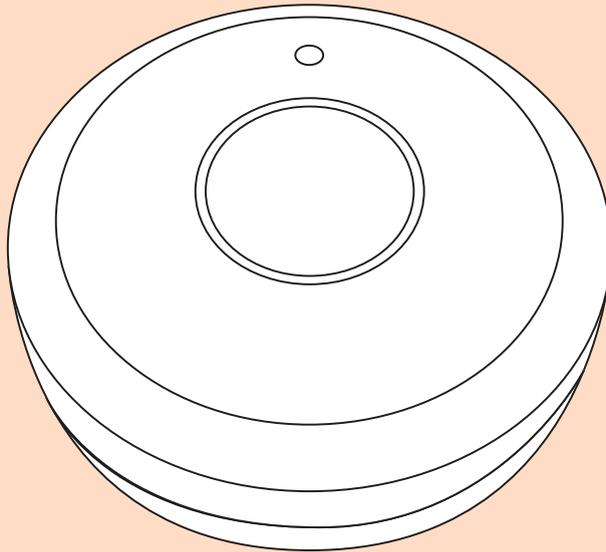

SMART CLIMATE & ENTERTAINMENT CONTROL (STANDARD)


Manual Guide



Legate Smart Appliances



Let's Get Started.

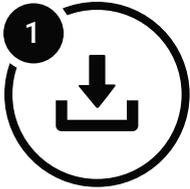

Install the app

Download the **Legate Smart Home** app from Google Play or the App Store on a compatible phone or tablet.



Register and login

Register on the app by using your contact number or Email address.




Connect to wifi

Make sure that your mobile phone and smart device are connected to 2.4 GHz wifi network.

*note: The distance between the phone and smart device should not be greater than 4meters while pairing both devices. If the signal is week you'll need a wifi booster. (Recommended Wifi Booster Version: **TP LINK TL-WA855RE**)

**Legate Smart Climate &
Entertainment Control (Standard)
to Legate Smart Home App**


Getting the Smart Device Ready

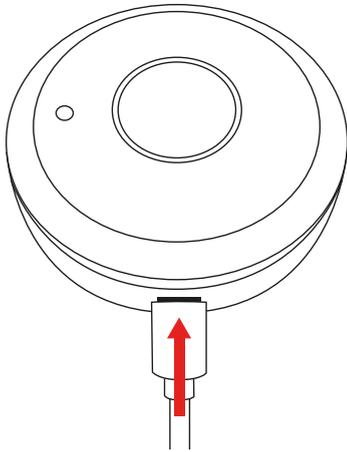

1

Insert the **USB Power Cord** on the IR's USB Port.


(note: If the Network Indicator blinks after you've inserted the USB Power Cord, proceed to **step 3**. But if not proceed to **step 2**)

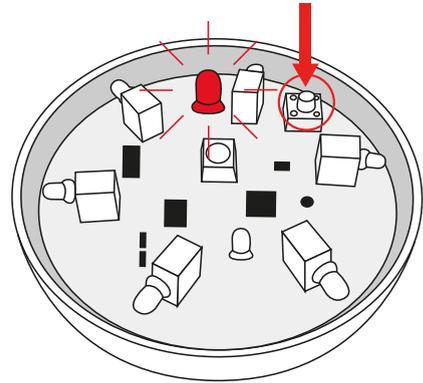

2


Twist & remove the **Top Cover**, then press & hold the **Reset Button** until Network Indicator blinks.

Add Smart Device

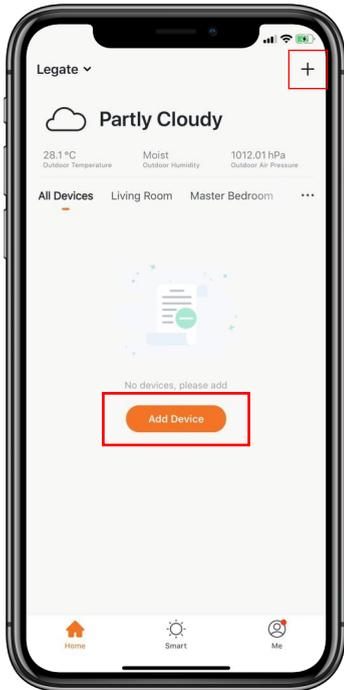

3


Open Legate Smart Home app,
Click “+” or **Add Device**.

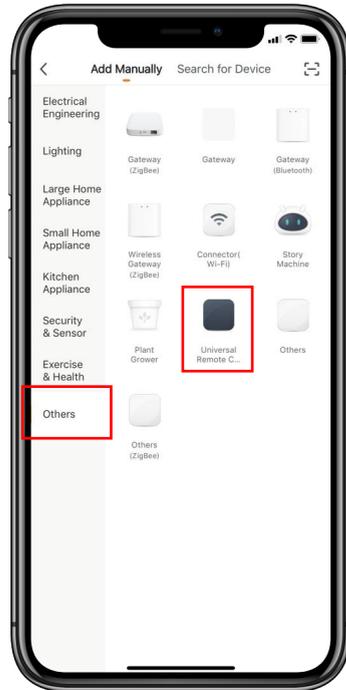

4

Under “**Others**” tab
Click “**Universal Remote Control**”.

Network Configuration

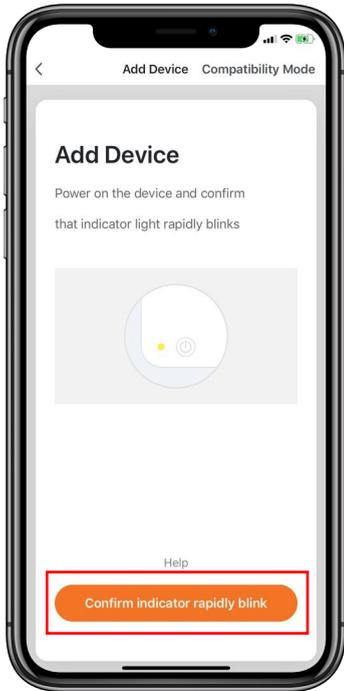

5

Click **“Confirm indicator rapidly blink”** button.



6


Enter your **Wifi Password**. Then click **“Confirm”** button.
(note: Only 2.4 GHz Wifi network are supported)

Network Configuration



7

Wait for the Smart Device connects to the app.

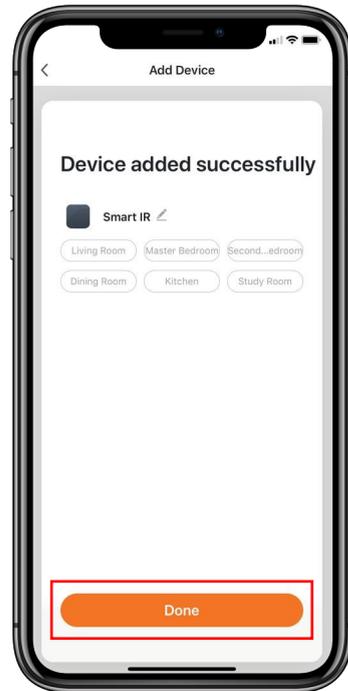

8

Click **“Done”** button when the Smart Device is successfully added.
(note: You can change the device’s name)

**Legate Smart Climate &
Entertainment Control (Standard)
Features**

Add Remote Control



1


Open Smart IR Tab,
Click **"Add Remote Control"**.



2

Select an appliance type
(note: these steps show how to connect air conditioner)

Add Remote Control

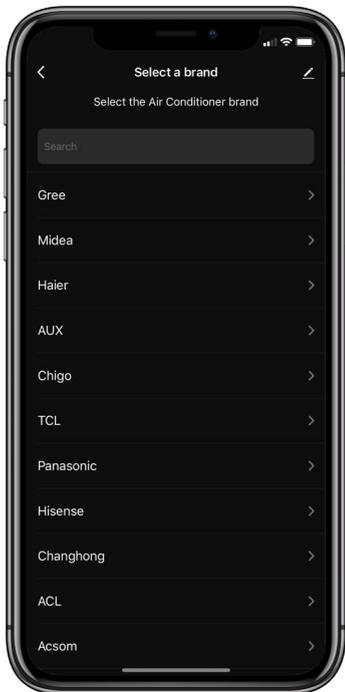

3

Search what appliance brand.



4


Point appliance remote controller at the IR Sensor and press at least 3 keys to match. Then click **"Matched"**.

Add Remote Control

Standard display view for connected appliances to IR Sensor




**Air Conditioning
Remote UI**

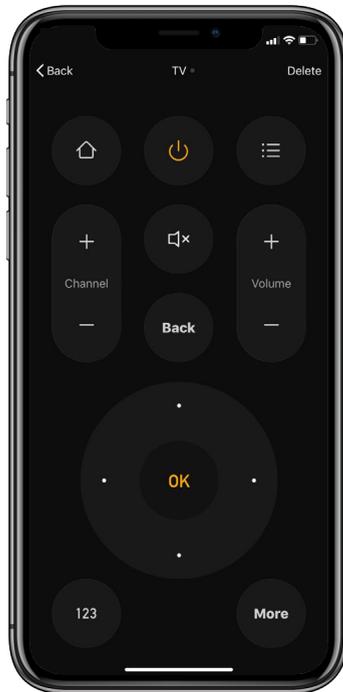

**Television
Remote UI**


Push Notification

Enable to turn off the notification.

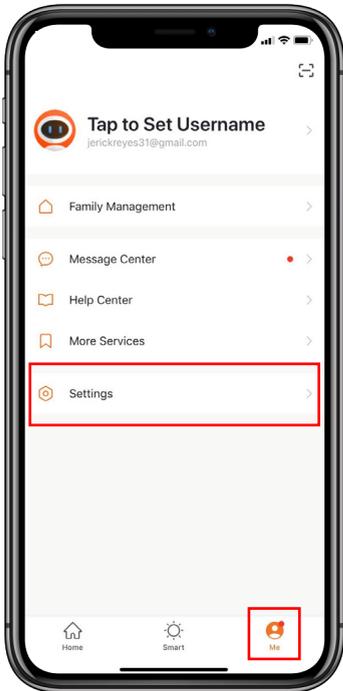


1

Click **"Me"** button on Legate Smart Home app. Then click **"Settings"**.

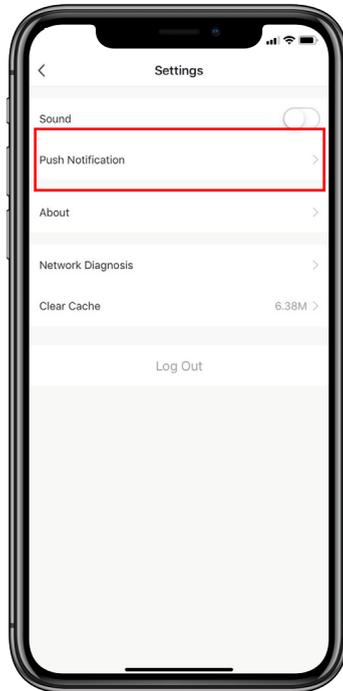

2

Click **"Push Notification"** tab.

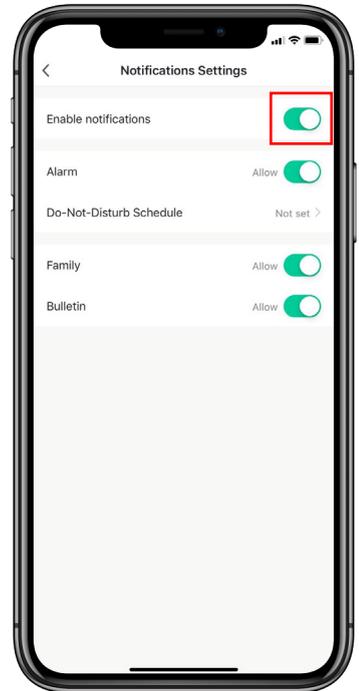


3

Can turn on or turn off the **"Enable notification"**


Remove Device from Legate Smart Home app

The device will restore to default settings.

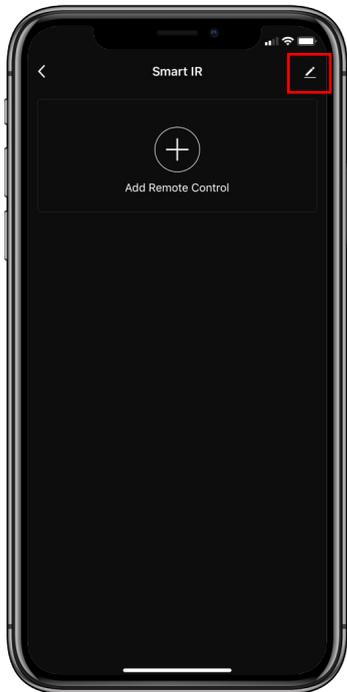


1

Click “✎” button on upper right corner of Smart IR Sensor’s main page.

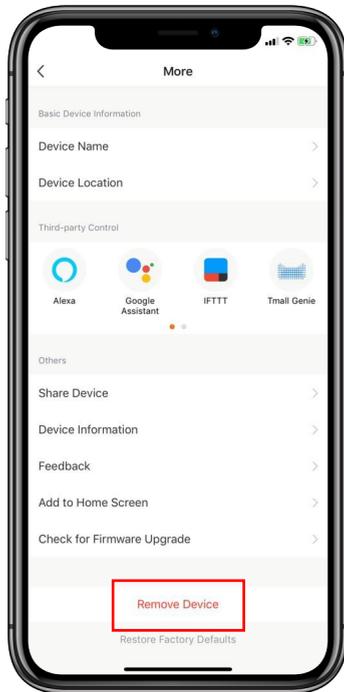


Click “**Remove Device**” tab.

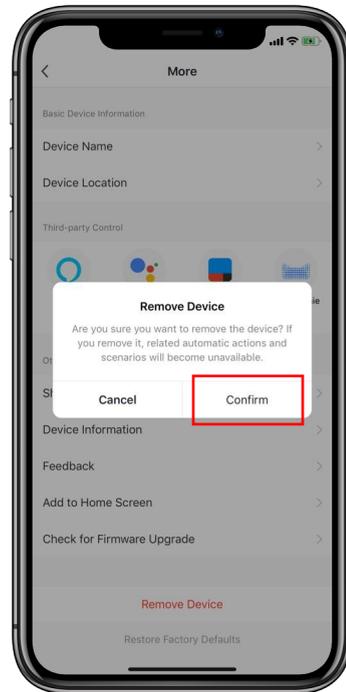

Click “**Confirm**” button to completely remove the device from the Legate Smart Home app.

**Legate Smart Climate &
Entertainment Control (Standard)
Configuration & Specifications**

Product Configuration

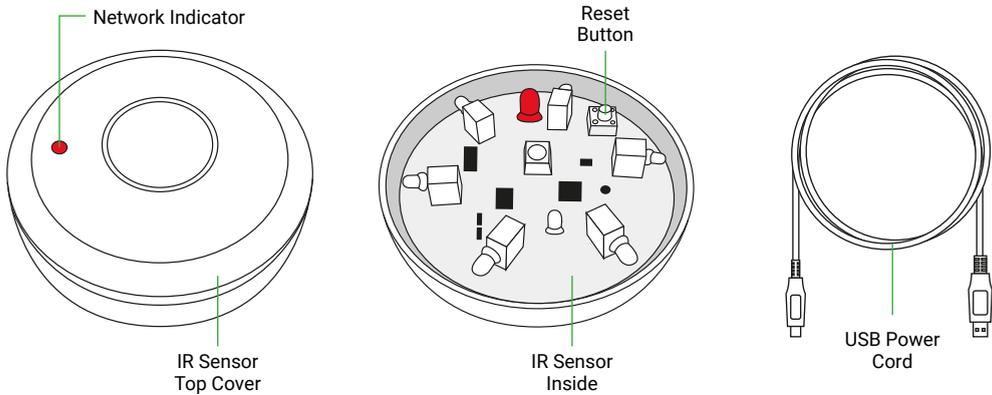

Reset:

Press and hold the **Reset Button** for 10 seconds until the network indicator blinks. Then the device will be automatically be removed to the Legate Smart Home app.

Specifications

Power supply	:	Mini USB, 5V-1A
Infrared distance	:	7 Meter
Infrared angle	:	360°
Maximum current	:	110mA
Maximum power	:	0.55w
Wireless type	:	2.4 GHz
Wifi distance	:	45m
Protocol	:	IEEE 802.11b/g/n
Operating Temperature	:	0°C ~ 50°C (32°F ~ 122°F)
Free app	:	Legate Smart Home
Support systems	:	Android and IOS
Voice Control	:	Google Home



LEGATE[®]
Smart home

Your one stop shop for all your Smart Home needs

www.legate.com.sg