




LEGATE
Smart home

SMART CONTACT SENSOR


Manual Guide

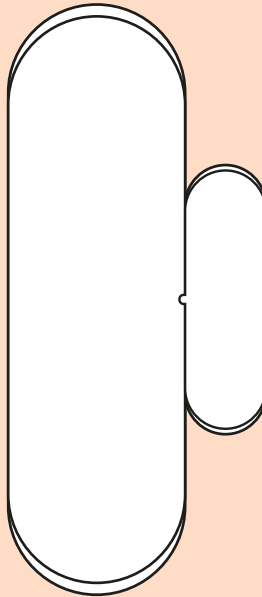

Legate Smart Appliances



Let's Get Started.

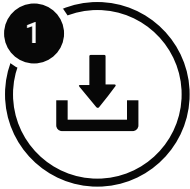

Install the app

Download the **Legate Smart Home** app from Google Play or the App Store on a compatible phone or tablet.



Register and login

Register on the app by using your contact number or Email address.




Connect to wifi

Make sure that your mobile phone and smart device are connected to 2.4 GHz wifi network.

*note: The distance between the phone and smart device should not be greater than 4meters while pairing both devices. If the signal is week you'll need a wifi booster. (Recommended Wifi Booster Version: **TP LINK TL-WA855RE**)


**Legate Smart Contact Sensor
to Legate Smart Home App**

Getting the Smart Device Ready

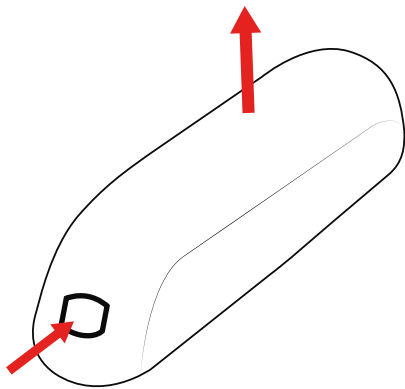

1


Press the **Disassemble Button** to release the sensor's cover.

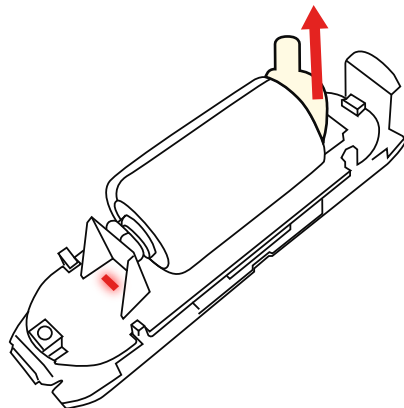

2


Remove the **White Battery Strip**, then a red light will blink rapidly.

Add Smart Device

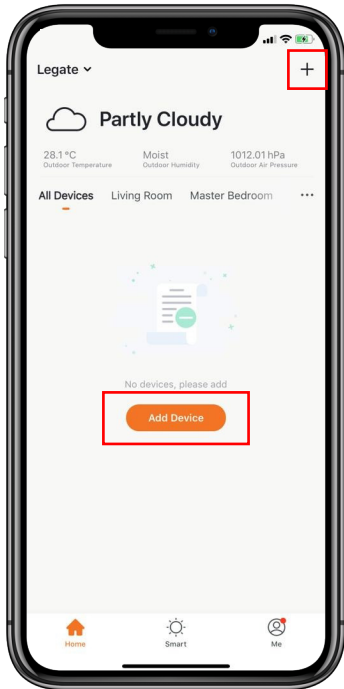

3


Open Legate Smart Home app,
Click “+” or **Add Device**.

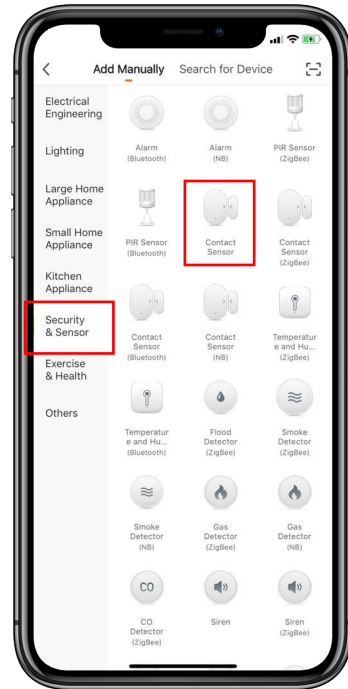

4


Under **“Security & Sensor”** tab
Click **“Contact Sensor”**.

Network Configuration

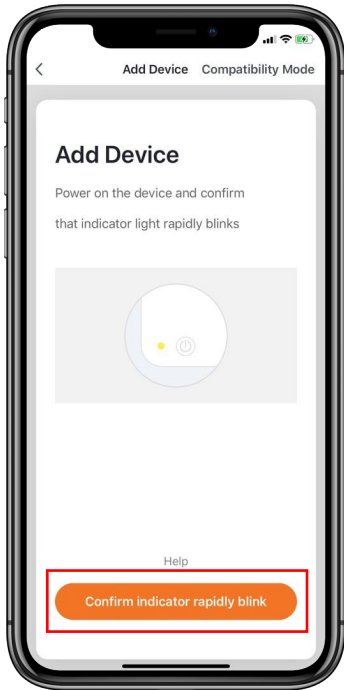

5


Click **“Confirm indicator rapidly blink”** button.

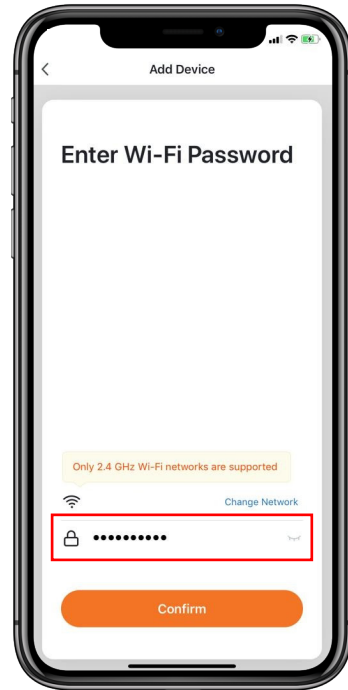

6


Enter your **Wifi Password**. Then click **“Confirm”** button.
(note: Only 2.4 GHz Wifi network are supported)

Network Configuration

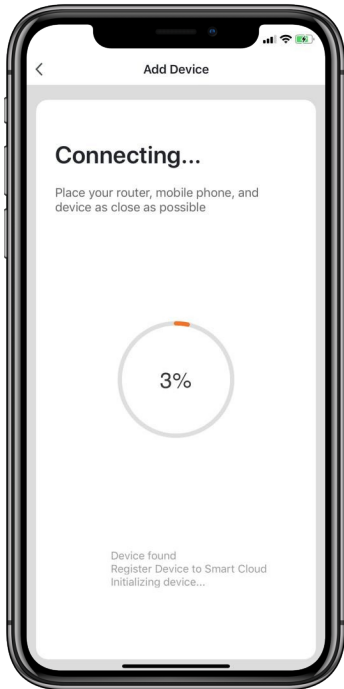

7

Wait for the Smart Device connects to the app.

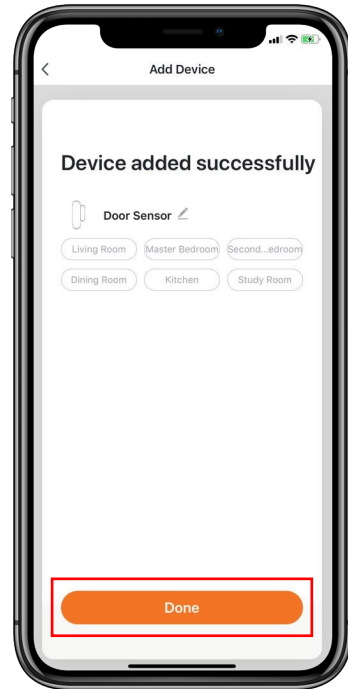


8

Click **“Done”** button when the Smart Device is successfully added.
(note: You can change the device’s name)

Legate Smart Contact Sensor Features

Main Function

1. Working status, Open/Close the door or window. It takes 3-5 seconds to receive the notification pushing when it is triggered.

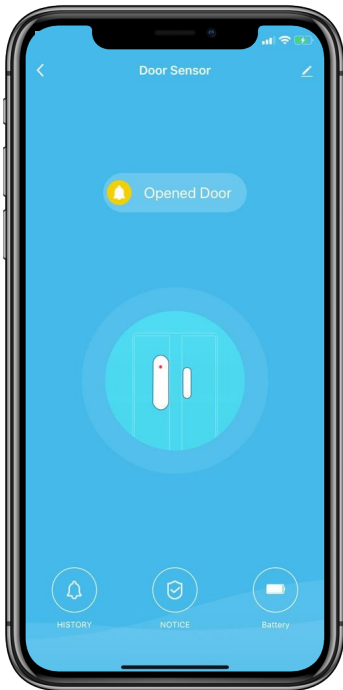

Door/Window is Open




Door/Window is Closed




Push Notification

Main Function

2. Alarm recording (click **"History"**).
3. Turn on and tur off the alarm (click **"Notice"**. No alarm pushing will be receiving after alarm closed, only alarm record can received).

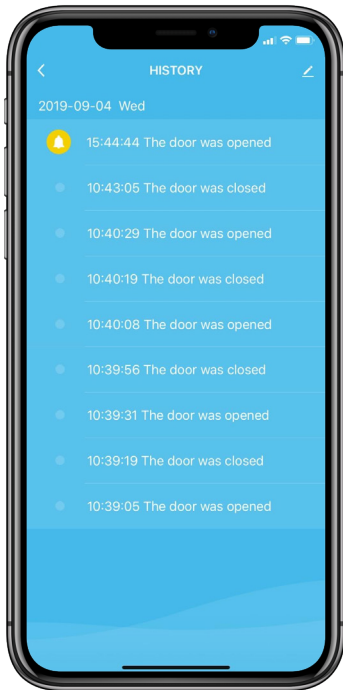


Alarm recording

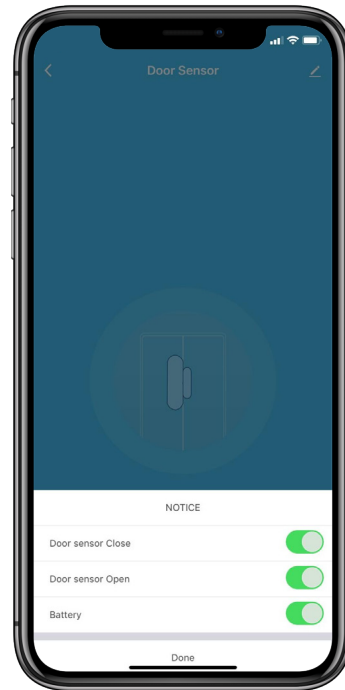

Turn on/off the alarm


Push Notification

Enable to turn off the notification.

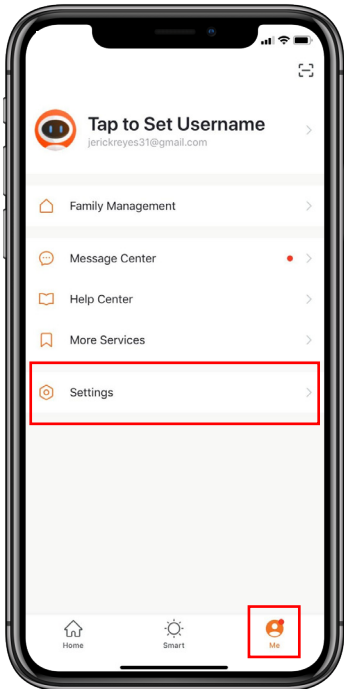


1

Click **"Me"** button on Legate Smart Home app. Then click **"Settings"**.

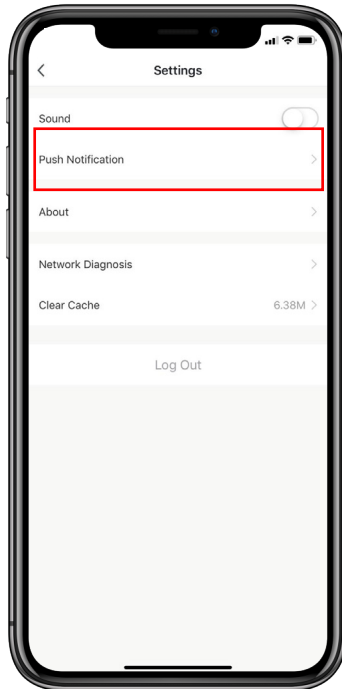

2

Click **"Push Notification"** tab.

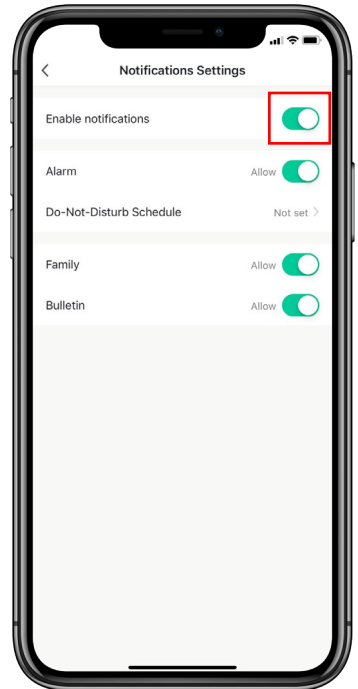


3

Can turn on or turn off the **"Enable notification"**


Remove Device from Legate Smart Home app

The device will restore to default settings.

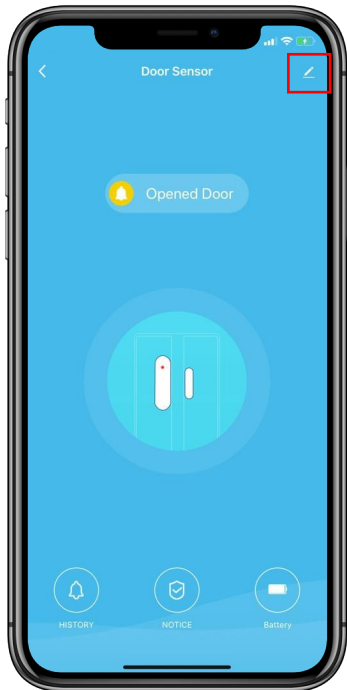


1

Click “✎” button on upper right corner of Smart Contact Sensor’s main page.

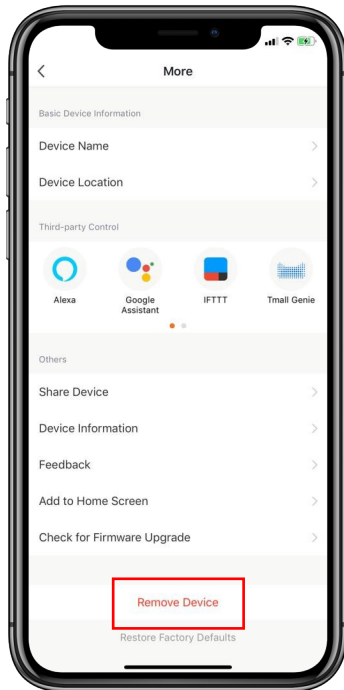

2

Click “**Remove Device**” tab.

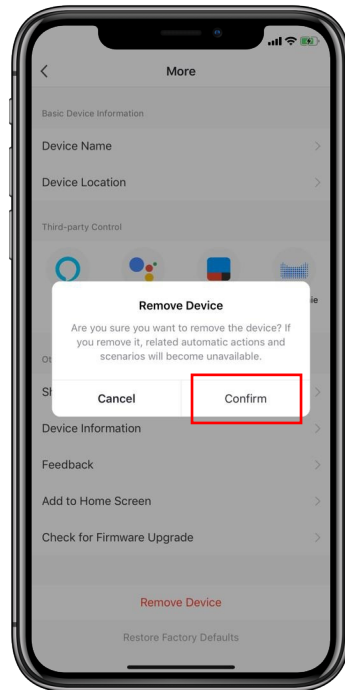


3

Click “**Confirm**” button to completely remove the device from the Legate Smart Home app.

Legate Smart Contact Sensor Configuration & Specifications

Product Configuration

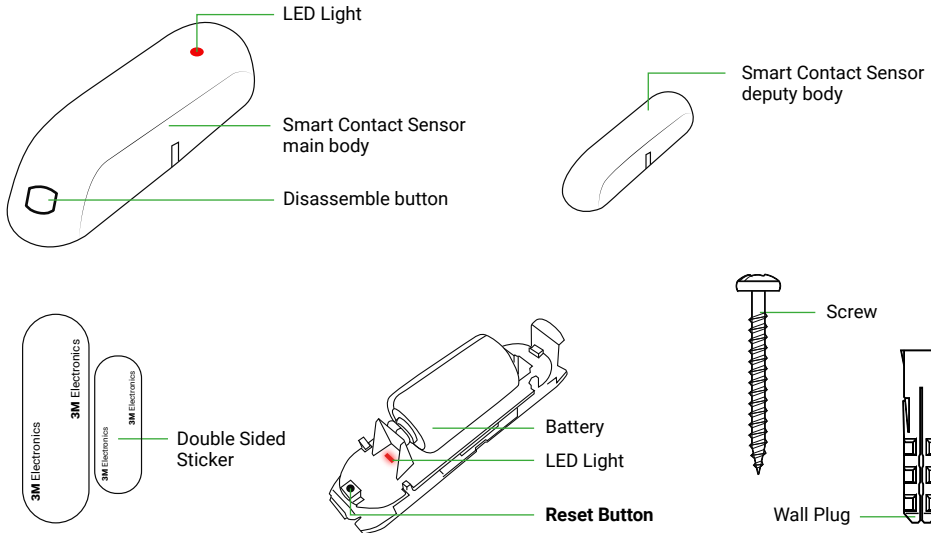

Reset:

Press and hold the **Reset Button** for 6 seconds until the LED Light blinks rapidly. Then the device will be automatically be removed to the Legate Smart Home app.

Specifications

Battery	:	CR2-3V x 1
Standby current	:	13uA
Working current	:	115mA-120mA
Standby time	:	5 years
Working time	:	1 year (15 times/day) 2 years (7 times/day)
Wireless type	:	2.4 GHz
Wireless standard	:	IEEE 802.11b/g/n
Wireless range	:	45M
Operating Temperature	:	0°C ~ 40°C (32°F ~ 104°F)
Operating Humidity	:	20% ~ 85%
Storage Temperature	:	0°C ~ 60°C (32°F ~ 104°F)
Storage Humidity	:	0% ~ 90%
Size	:	Main Body: 71mm x 21mm x 22mm Small Body: 40mm x 11mm x 11mm



LEGATE[®]
Smart home

Your one stop shop for all your Smart Home needs

www.legate.com.sg